


PPT MINI - ASSEMBLY INSTRUCTIONS

PPT MINI - Components

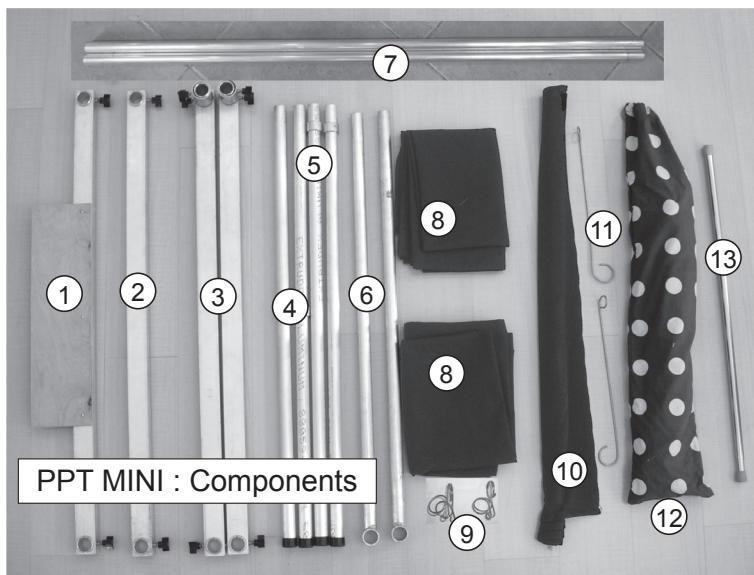

1. Stage (D)
2. Front Crossbar (A)
3. Side Crossbars (wings) (B & C)
4. Legs (front)
5. Legs (back)
6. Wing Drape Supports
7. Front Verticals (with rod support brackets)
8. Wing Drapes
9. Rod Support Clips
10. Scrim
11. Scrim hangers
12. Doorway Theatre
13. Tension Rod

Specifications

2 00 x 91.4 cm [80" x 36"] (front);
Doorway Puppet Theatre: 2 00 x 109 cm [80" x 43"]
(Stage opening): 53 x 48 cm [21" h x 19"w];
Wings: 200 x 74 cm [80" x 29"] each;
Stage Platform: 15cm deep x 48 wide [6" deep x 19" wide];
Weight: ~ 11 kgs [~25lbs]

HOW TO PUT YOUR PPT MINI TOGETHER

NOTE: When you are assembling remember to keep the knobs facing towards you.


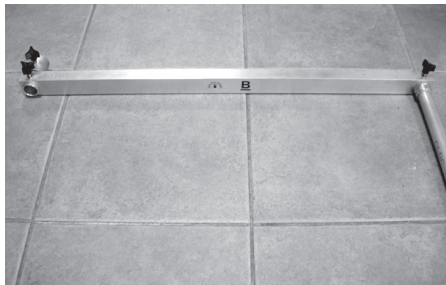
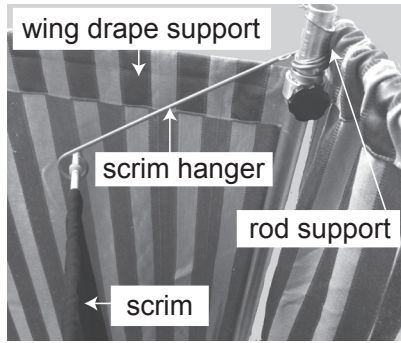
		
<p style="text-align: center;">(1)</p>	<p style="text-align: center;">(2)</p>	
<p>Slide the Front Legs into each end of the front Crossbar (A) up to stop rings, tighten knobs. Make sure end caps are on same side of the crossbar.</p>	<p>With the knobs facing you attach one of the rear legs at the single-knob end of Crossbar (B) and tighten knob. Repeat for Crossbar (C).</p>	
<p style="text-align: center;">(3)</p>	<p style="text-align: center;">(4)</p>	
<p>Knobs facing you place double-knob end of Crossbar (B - Stage Left) over right front leg (now inserted in Crossbar (A)) and push down until it seats. Tighten knob. Repeat for Crossbar (C - Stage Right). (See Fig. 1)</p>	<p>Slide Front Verticals through ends of the Stage Crossbar (D). Make sure the knobs point towards you and stage platform is on top. Slide a Wing Drape Support onto the top of each Front Vertical with the loops on the Rod Support Brackets pointing away from the center of the theatre and tighten knobs at the required height. For more details see (5) and (6)</p>	

Fig. 1
Complete frame without Theatre and Wing Drapes. (Side View)



Rear View

(5) - Installing Wing Drape Supports & Scrim Hangers

Wing Drape Supports: Slide tubing end over **Front Vertical** with knob facing in. Repeat for other side. (Install **Wing Drapes** on **Wing Supports** by sliding onto supports through channels provided on Drapes). With stability in mind you can adjust both the **Wing Supports** and **Crossbars** to accommodate other performers.

Scrim Hangers: Slide The double looped end of **Scrim Hanger** over **Front Vertical** as shown above in Fig. 2 with the loop at the other end facing down. Repeat for other side. Insert **Scrim** rod ends through loops in **Scrim Hangers**.

(6) - Installing Stage Dressing


Install **Stage Dressing** (not shown below) with trim to the front and attach with the Velcro.



PPT MINI - Front

open door designs

OPEN DOOR DESIGNS
 1597 Dupont Street
 Toronto, ON M6P 3S8

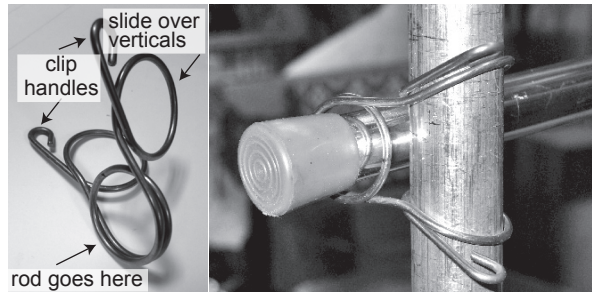


(a)

(b)

Rod Support Clips


(6) - Installing Rod Supports

Slide one of the **Rod Support Clips (a - red tape)** onto the Stage Right **Front Vertical** by compressing clip handles as shown in fig. (b) above. Repeat for the other side. With the **Doorway Theatre** on the **Tension Rod**, insert the ends of the rod into the **Rod Support** loops and adjust clips to correct height by compressing clip.

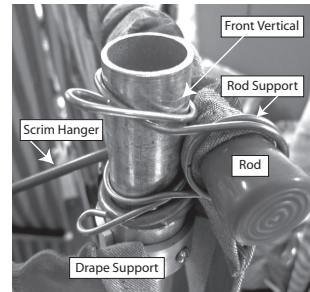

NOTES

Your PPT-MINI is now ready to use. For added stability gallon jugs of water can be tied to the backlegs and in outdoor venues you can anchor the legs with the tent pegs provided.

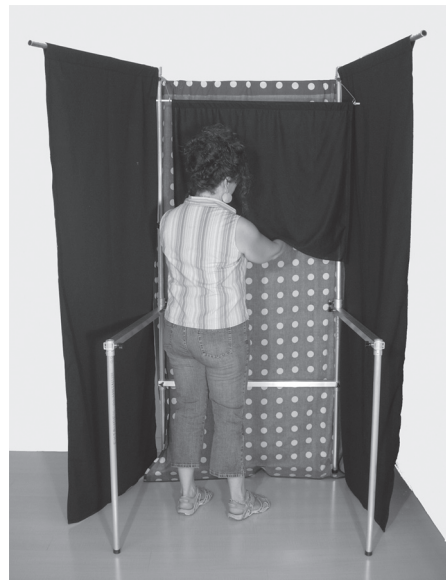

PPT MINI - Back

INFORMATION

contact: Joanne Bigham
email: info@opendoordesigns.ca
telephone: (416) 531-1290
web: www.opendoordesigns.ca