


PPT MINI - ASSEMBLY INSTRUCTIONS

PPT MINI - Components

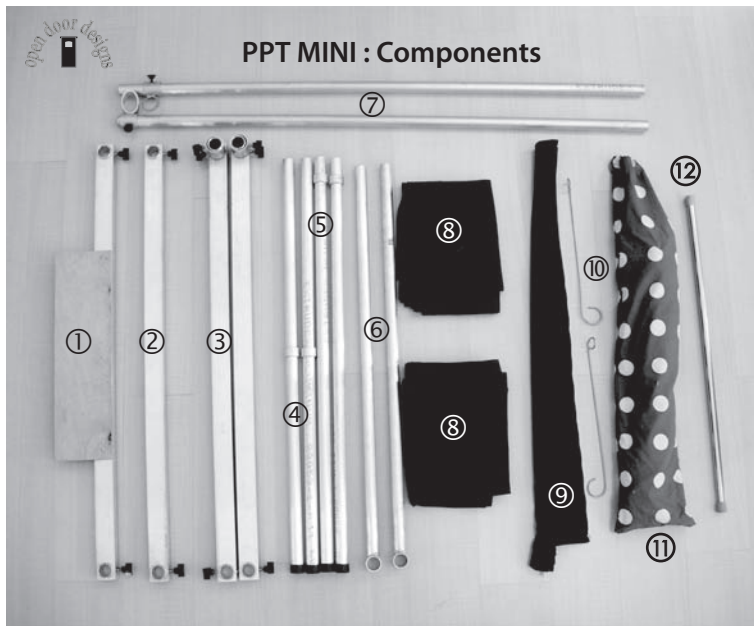

1. Stage (D)
2. Front Crossbar (A)
3. Side Crossbars (wings) (B & C)
4. Legs (front)
5. Legs (back)
6. Wing Drape Supports
7. Front Verticals (with rod support brackets)
8. Wing Drapes
9. Scrim
10. Scrim hangers
11. Doorway Theatre
12. Tension Rod

Specifications

2 00 x 91.4 cm [80" x 36"] (front);
Doorway Puppet Theatre: 2 00 x 109 cm [80" x 43"]
(Stage opening): 53 x 48 cm [21" h x 19"w];
Wings: 200 x 74 cm [80" x 29"] each;
Stage Platform: 15cm deep x 48 wide [6" deep x 19" wide];
Weight: ~ 11 kgs [~25lbs]

HOW TO PUT YOUR PPT MINI TOGETHER

NOTE: When you are assembling remember to keep the knobs facing towards you.


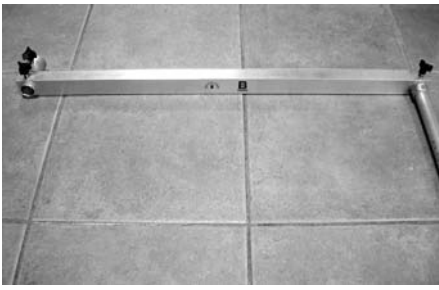

| | | |
|---|---|---|
|  |  |  |
| <p style="text-align: center;">(1)</p> | <p style="text-align: center;">(2)</p> | |
| <p>Slide the Front Legs into each end of the front Crossbar (A) up to stop rings, tighten knobs. Make sure end caps are on same side of the crossbar.</p> | <p>With the knobs facing you attach one of the rear legs at the single-knob end of Crossbar (B) and tighten knob. Repeat for Crossbar (C).</p> | |
| <p style="text-align: center;">(3)</p> | <p style="text-align: center;">(4)</p> | |
| <p>Knobs facing you place double-knob end of Crossbar (B) over right front leg (now inserted in Crossbar (A)) and push down until it seats. Tighten knob. Repeat for Crossbar (C). (See Fig. 1)</p> | <p>Slide Front Verticals through ends of the Stage Crossbar (D). Make sure the knobs point towards you and stage platform is on top. Slide a Rod Support Bracket onto each Front Vertical with the loops on the Rod Support Brackets pointing away from the center of the theatre and tighten knobs at the required height. (See Figs. 1 & 2)</p> | |

Fig. 1
Complete frame without Theatre and Wing Drapes. (Side View)



Rod Supports

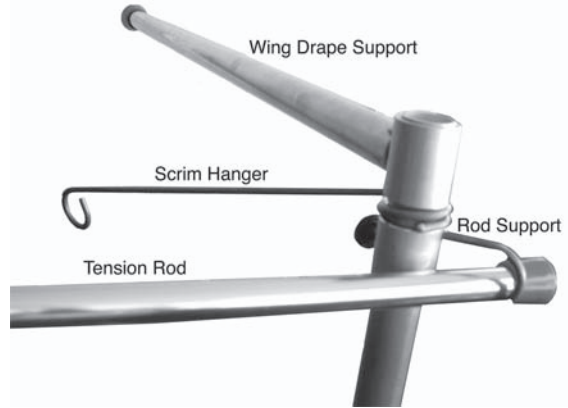


Fig. 2

(5) - Installing Rod Supports

Slide the Stage Right* **Rod Support** (SL-marking on inside of tubing) with red marking facing up onto the Stage Right **Front Vertical**. With the **Doorway Theatre** on the **Tension Rod**, insert the ends of the rod into the **Rod Support** loops and adjust brackets to correct height and tighten knobs to lock the **Tension Rod** in place. (See Fig.2)

* Stage Right is referenced from backstage.

(6) - Installing Scrim Hangers & Wing Drape Supports

Scrim Hangers: Slide The double looped end of **Scrim Hanger** over **Front Vertical** as shown above in Fig. 2 with the loop at the other end facing down. Repeat for other side. Insert **Scrim** rod ends through loops in **Scrim Hangers**.

Wing Drape Supports: Slide tubing end over **Front Vertical** (as shown in Fig. 2) and install **Wing Drapes** on **Wing Supports** by sliding onto supports through channels provided on Drapes. With stability in mind you can adjust both the **Wing Supports** and **Crossbars** to accomodate other performers.

(6) - Installing Stage Dressing


Install **Stage Dressing** (not shown below) with trim to the front and attach with the velcro.

NOTES

Your PPT-MINI is now ready to use. For added stability in outdoor venues you can anchor the theatre legs with the tent pegs provided.



PPT MINI - Front

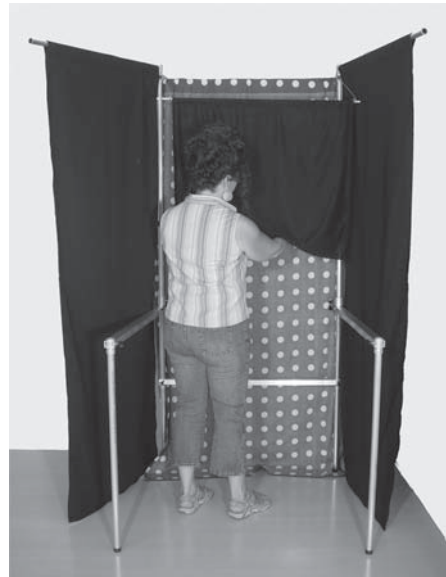

PPT MINI - Back

open door designs

OPEN DOOR DESIGNS
 1597 Dupont Street
 Toronto, ON M6P 3S8

INFORMATION

contact: Joanne Bigham
email: info@opendoordesigns.ca
telephone: (416) 531-1290
web: www.opendoordesigns.ca